

# Setup Instructions

## Collapsible Background Stand

Style Series: 1103

---

### Description

The sturdy, collapsible Background Stand is made of lightweight aluminum. The unique design allows the stand to hold a collapsible background off the floor or adjusts so the tripod legs collapse outward allowing the background to come all the way down to the floor.

### Product Contains

[1] Collapsible Background Stand

## INSTRUCTIONS

Start by loosening the thumb screw located near the base of the stand. Once the screw has been loosened pull the 3 legs towards the floor. Once you have the tripod legs in the desired position tighten the thumb screw.

To reach your desired height you can loosen the thumb screws to elevate the telescoping poles. Make sure to tighten all thumb screws on the telescoping poles to ensure they stay locked in place.

To attach a collapsible background to the top of your stand start by putting your thumb at the base of the clip and using your pointer and middle fingers pull the clip towards the base. Once the clip is opened all the way take your collapsible background and angle the front of the frame into the clip. The front of the background frame should settle into the indentations on the clamp. You can then angle the back of the frame into the indentations on the back of the clamp.

Locate the clip towards the base of the stand. You can slide the clip up and down the shaft of the stand to create your desired position. To finish attaching the collapsible background to the bottom of your stand, start by opening the clip as shown above. Again, angle the front of the frame into the clip first and then angle the back of the background frame into the clip.

